


## Audi (Q7) WIRING DIAGRAM

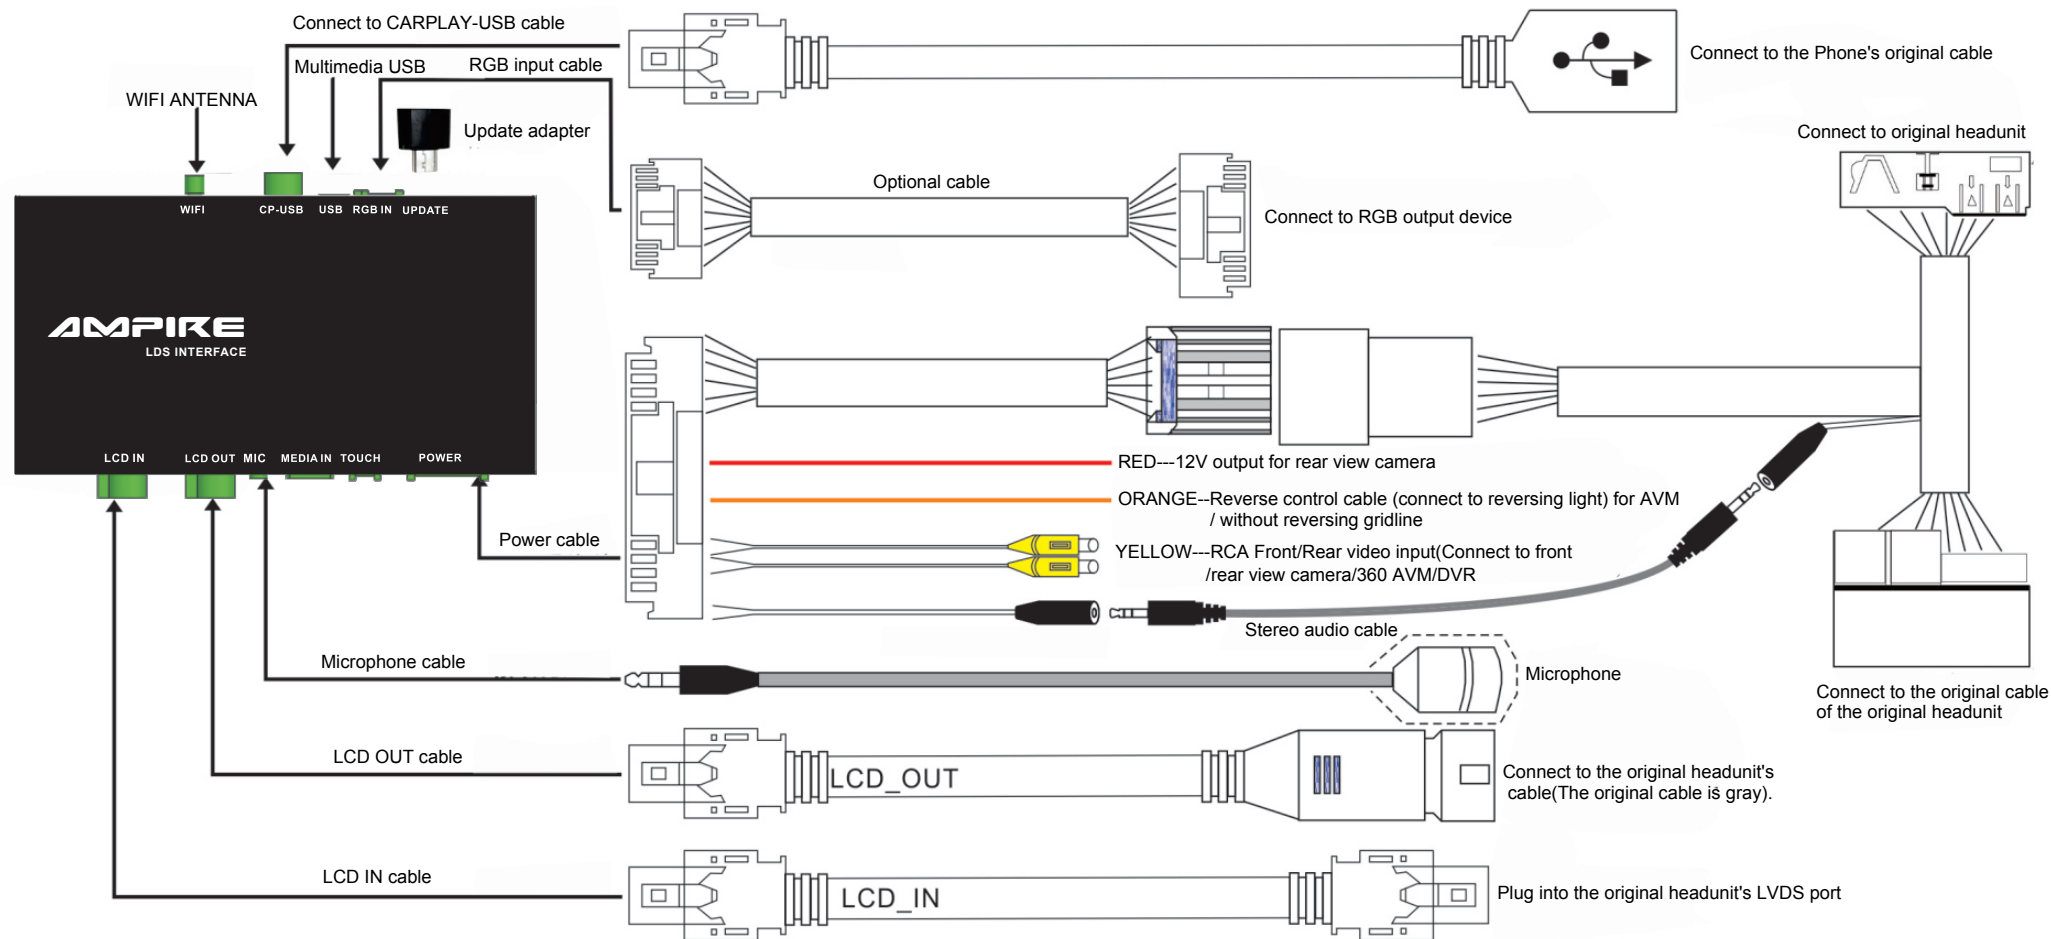


### DIP SWITCH SETTING

(After changing the dip code,press "reset"or power-on again)

PIN 1	PIN 2	PIN 3	PIN 5	CAR MODEL
ON	OFF	OFF	OFF	2017 A4/Q7 8" CAN1(CAN+/CAN-)connect to original ISO socket (pin6/pin12)
ON	OFF	OFF	ON	2017 A4/Q7 7" CAN1 connect to original ISO socket (pin6/pin12) CAN2 to pin1/pin7;Q7 MMI blue&white wire connet to ISO pin3
OFF	OFF	ON	ON	Lamando/high-end A3(7") CAN1 connect to ISO socket's (Gray socket)pin6&12,CAN2 connect to pin1&7
OFF	ON	ON	ON	Lamando/Low-end Q3/A3(5.8") CAN1 connect to ISO socket's (Gray socket)pin6&12,CAN2 connect to pin1&7

PIN 4	OFF/ON	Reversing gridline/Enable 360 panoramic
PIN 6	OFF/ON	Rear view camera CVBS input / RGB input
PIN 7	OFF/ON	NG/Touch point coordinate correction,and turn to "OFF"
PIN 8	OFF/ON	Aftermarket rear view camera/Original rear view camera

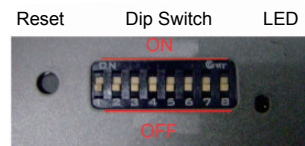

**REMARK:**Please keep in the AUX interface when switch the CarPlay interface  
(If there is no AUX status,pls activate it by computer)



- 1) For A3/A4L/Q7 control panel,long press and hold "BACK" button to switch MENU, long press "BACK" button again,exit the switch MENU.
- 2)Short press "MENU" button to open "Siri".
- 3)Knob to control up/down/right/left/ok.