


## Audi (A6/Q3/Old Q7) WIRING DIAGRAM

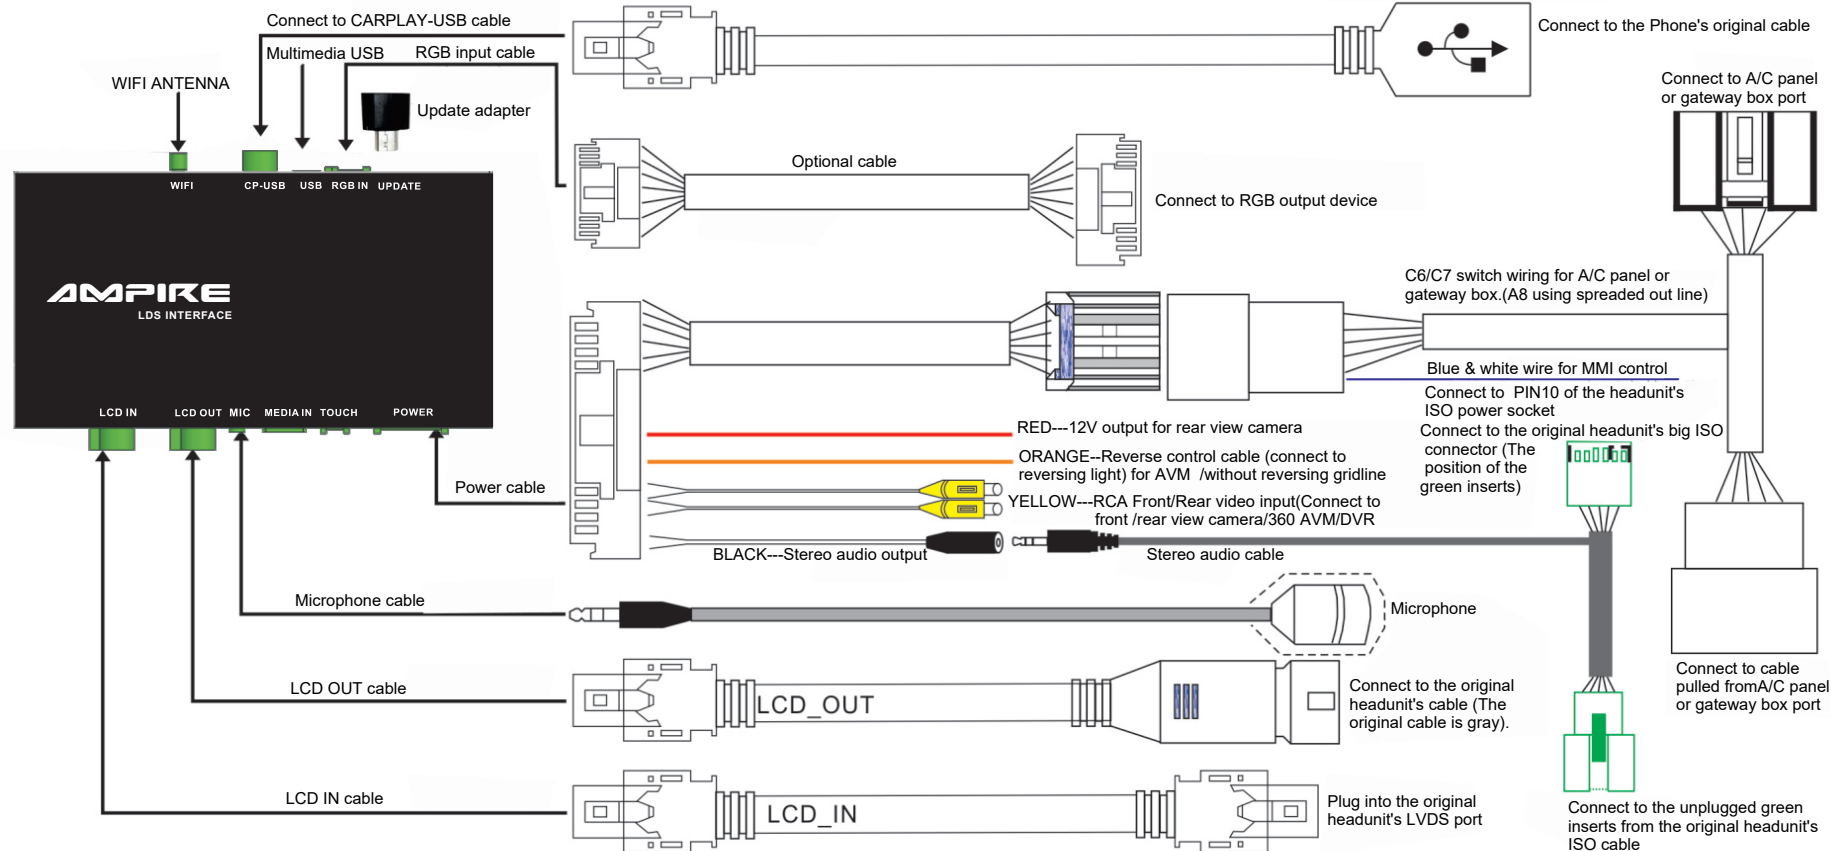


### DIP SWITCH SETTING

(After changing the dip code, press "reset" or power-on again)

PIN 1	PIN 2	PIN 3	PIN 5	CAR MODEL
ON	OFF	OFF	OFF	2010~2012 A6/LA7(C6) CAN1 connect to gateway box 10-12 Q7 (7") CAN1 connect to A/C beige socket's pin7&pin8
ON	OFF	ON	OFF	13-15 A6/A7/A8(C7) CAN1 connect to A/C red socket's pin4&5
OFF	OFF	ON	OFF	09~18 A4/A5/Q5 CAN1 connect to gateway box's red socket's pin5&pin15. (Gateway box is in the left side of the co-pilot)
ON	ON	OFF	OFF	High-end 7" A1/Q3 CAN1 connect to gateway box's (Under the steering wheel) pin5&15 or to A/C panel's beige socket's pin12&13
OFF	ON	OFF	OFF	Low-end 6.5" A1/Q3 CAN1 connect to gateway box's (Under the steering wheel) pin5&15 or to A/C panel's beige socket's pin12&13
OFF	OFF	OFF	OFF	USA version A4/A5/Q5 CAN1 connect to gateway box's red socket's pin5&pin15. (Gateway box is in the left side of the co-pilot)
OFF	OFF	OFF	ON	USA version Q7 (6.5") CAN1 connect to A/C beige socket's pin7&8
ON	OFF	OFF	ON	17~18 A4/Q7(7") CAN1 connect to ISO socket's (Gray socket) pin6&12, CAN2 connect to pin1&7; 09~11 Q7 MMI blue&white wire connect to pin3
ON	OFF	ON	ON	16~18 A6/A7/A8 CAN1 connect to ISO socket's (Gray socket) pin6&12, CAN2 connect to pin1&7; MMI system blue&white wire connect to pin3
OFF	OFF	ON	ON	A3(7") CAN1 connect to ISO socket's (Gray socket) pin6&12, CAN2 connect to pin1&7
OFF	ON	ON	ON	Q3/A3(5.8") CAN1 connect to ISO socket's (Gray socket) pin6&12, CAN2 connect to pin1&7

Reset Dip Switch LED



**REMARK:** Please stay in the AUX Interface when opening the CARPLAY Interface



- 1) For A6/A7, long press and hold the "NAV" Button to enter the Interface, long press the "NAV" Button again to exit.
- 2) Short press "TEL" Button to open "Siri".
- 3) Knob to control up/down/right/left/ok.



- 1) For A1/Q3, long press and hold the Voice control Button to enter the Interface, long press the Voice control Button again to exit.
- 2) Short press the Voice control Button to open "Siri".
- 3) Steering wheel Roller to control up/down/ok.